

MILKING MACHINE USER GUIDE

- 1) Where the engine is used instead of the motor, the nuts become loose due to vibration and the shaft, bearings, inner segment strips wear out and the pump is frequently maintained. There is no guarantee or warranty for the engine
- 2) The vacuum pump should use oil made from a specific grade by the company. The use of other oils causes the pump to jam and shortens the life of the pump without inflating the inner straps.
- 3) Change the oil in the pump every two months. Replace the oil by cleaning the pump with petrol or kerosene and then pour two cups of oil in the rotor of the pump so that the life of the pump is extended and there is no problem in releasing milk.
- 4) Many times during milking, the cluster of the machine comes in contact with the ground, so dust, dirt, debris is drawn from the ground and the pump gets jammed even when it enters the pump, so be careful.
- 5) All cock machines should always be turned off when not in use so that no kid or potter can make a home there.
- 6) If there is any problem with any machine, first check all the above issues and if the problem still does not go away, contact the customer care on the machine and seek guidance. If the problem still persists, you should take the machine to the dealer from whom you bought the machine and have it repaired.